



HDF 880
INTERLOCKING
PLANKS
AC4
QUICK INSTALL
DUST FREE
NOISE LESS

Heritage Oak Brown

Timeless elegance

LAMINATED WOODEN FLOORING

a floating glueless interlocking flooring system that offers the warmth of real wood at the cost of ceramic. Ready to install floor planks for an instant makeover without the dust, noise and effort

wood
floors
that
**suit
your
Budget !**






Heritage Oak Natural

Luxurious flooring that
reflects your
LIFESTYLE

HIGH DENSITY FIBREBOARD

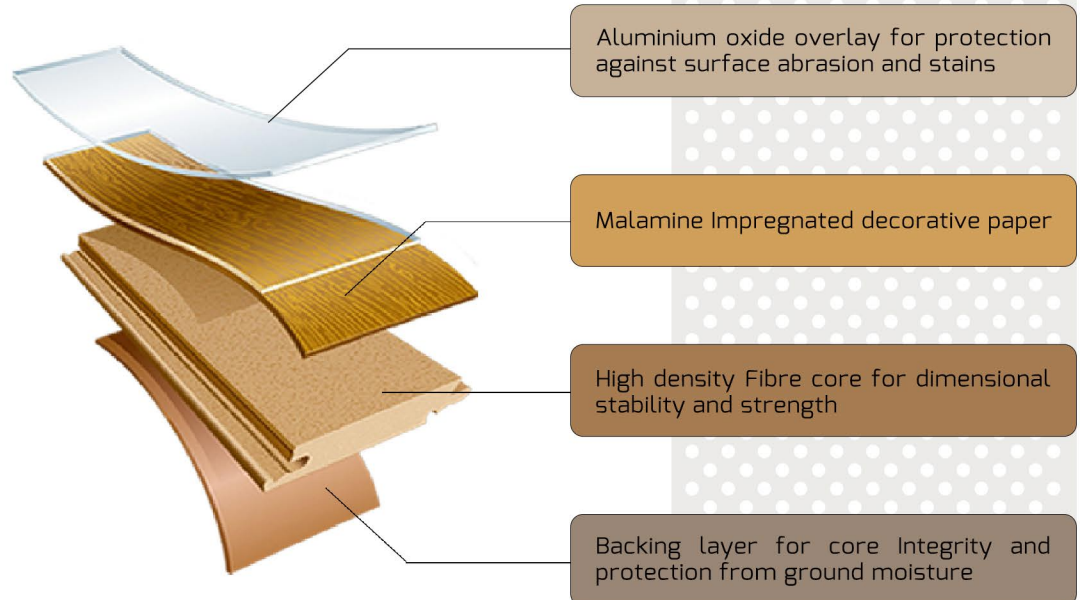

Quick Installation

Easy and Quick to install makes it the most convenient and clean flooring which can makeover any room within hours over existing or new floors



Wear Resistance

Built tough to handle everyday usage Our ultra tuff wear layer provides long life & supreme protection from surface abrasion & stains.



Impact Resistant

Ultra high density core provides exceptional strength that can easily handle impact from falling objects & heavy furniture items.



Easy to Clean

LEBEN Laminate floors are easier to clean than ordinary floors as dirt and grime do not stick to its surface and a simple wipe does the job.



Warm & Cozy

Our floors mimic the look of real wood and provide a warm and cozy feel that sets a rich tone for the whole interior.



Pocket Friendly

LEBEN laminate floors are the ultimate alternate to real wood floors which are out of reach for many. Our Floors simply make luxury affordable.

For Indoor Use Only

LEBEN™



French Bleed Honey Oak

Inspired by Nature's vibrant colors, exquisite textures and illuminating hues, LEBEN Laminate flooring radiates true luxury and adds exceptional beauty to your living spaces. Authentic shades and patterns along with realistic textures combine to make our floors incredibly natural. Seamless interlocking ensures flawless surface to bring out the most stunning finish.

experience
the
Luxury



Heritage Oak Coffee

feel the **Comfort**

Decorating your home is about creating an atmosphere that will make you feel at home. And about combining elements that please your senses. One of the most important of these elements is the floor. What the floor looks and feels like, sets the tone for the entire interior

attention
to
Details

Elegant Mahogany


A perfect balance between nature, craftsmanship and high-quality finishing. Our Wood Flooring is designed for you to enjoy right down to the last detail.



Color & finish Options !

Parquet Series


AC4 | 12mm | HDF 820

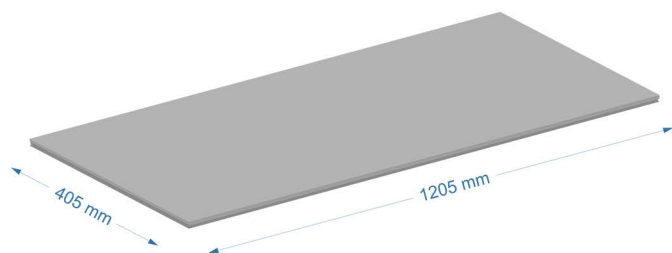

Plank Size :: 1205 mm x 405 mm
Packing :: 5 Planks | 26.30 SQF Per Box
Surface :: Embossed in Register (EIR)
Edge :: Bevelled



Parquet Natural

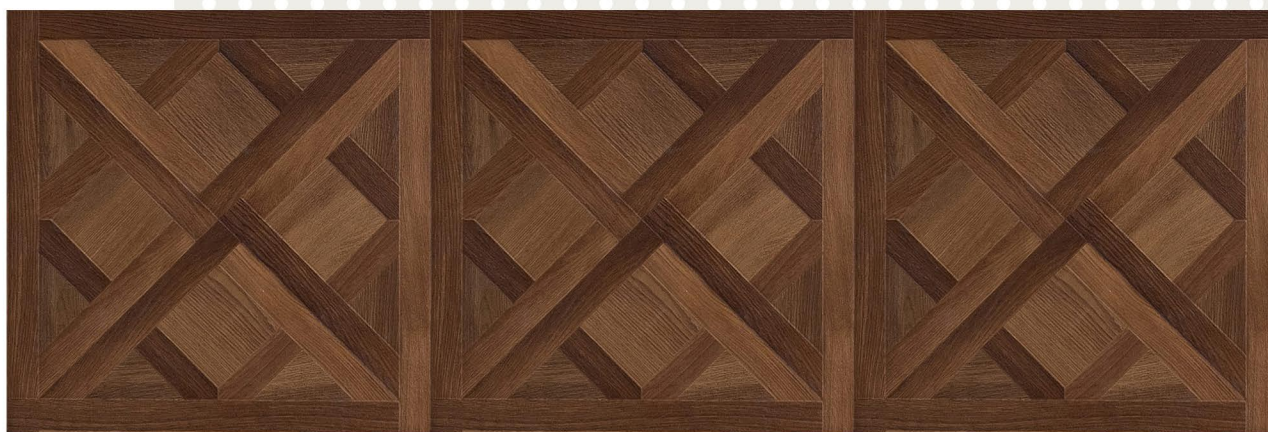


Parquet Walnut




Color & finish Options !

Vintage Series


AC4 | 8mm | HDF 880

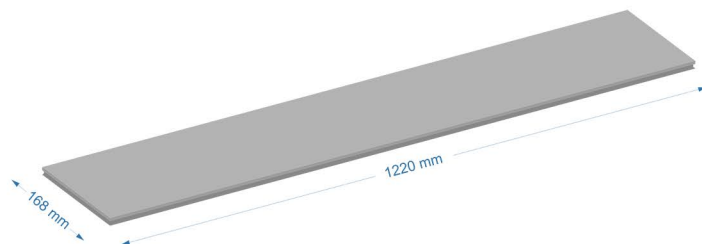

Plank Size :: 1220 mm x 168 mm
Packing :: 15 Planks | 33 SQF Per Box
Surface :: Embossed in Register (EIR)
Edge :: Straight

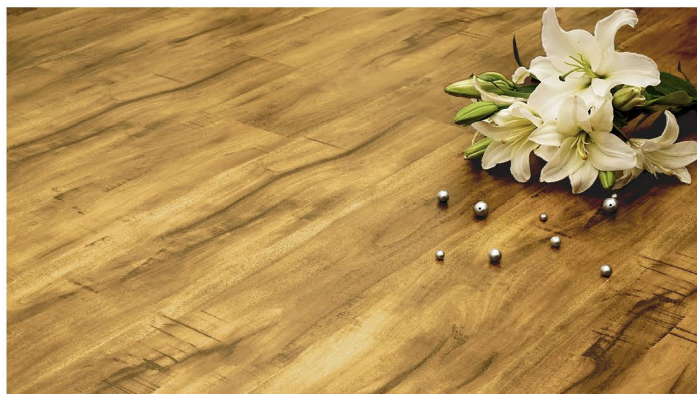

Vintage Natural

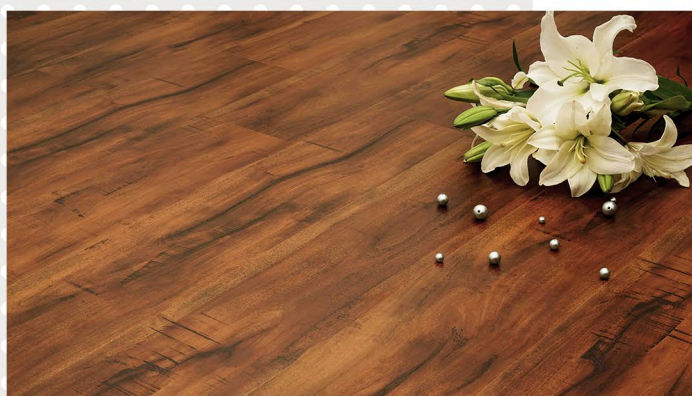

Vintage Oak




Vintage Grey




Color & finish Options !

French Bleed


AC4 | 8mm | HDF 880

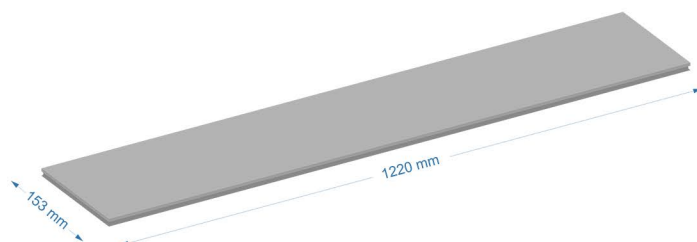


Plank Size :: 1220 mm x 153 mm
Packing :: 15 Planks | 30 SQF Per Box
Surface :: Micro Emboss
Edge :: V Groove

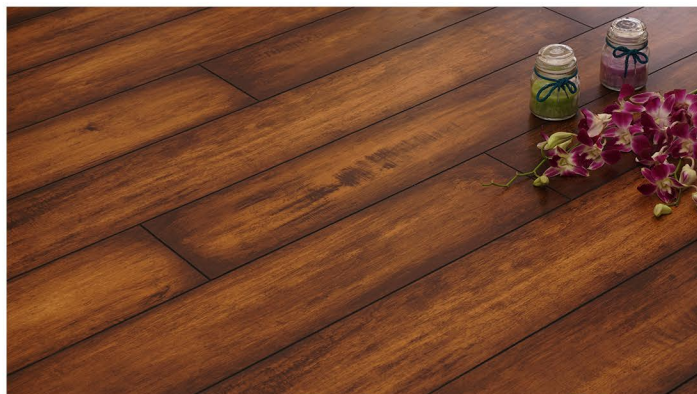

Honey Oak French Bleed

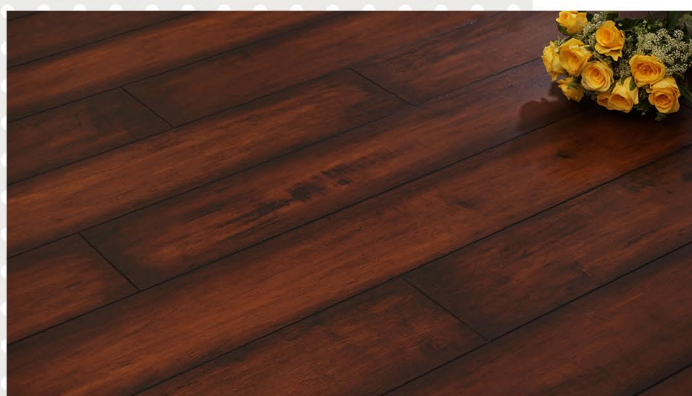

Dark Cherry French Bleed

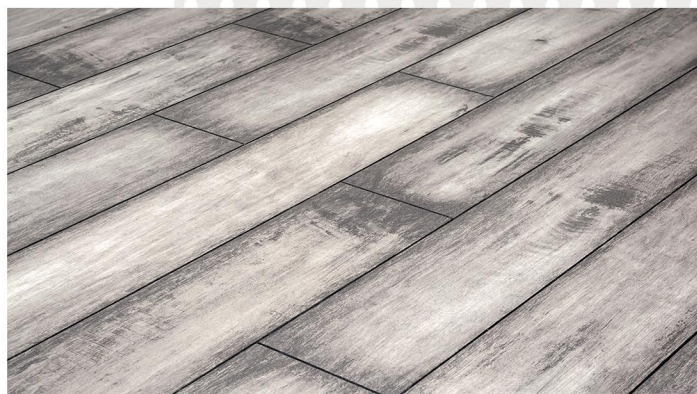


Ash Grey French Bleed



Color & finish Options !

High Gloss


AC4 | 8mm | HDF 880

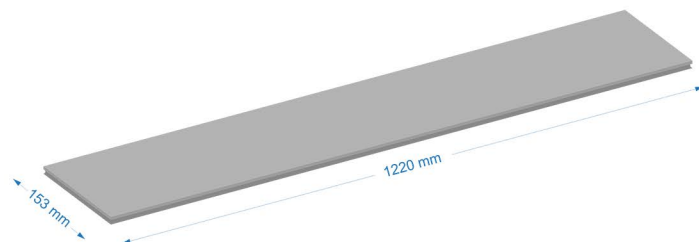

Plank Size :: 1220 mm x 153 mm
Packing :: 15 Planks | 30 SQF Per Box
Surface :: Glossy
Edge :: V Groove



African Oak High Gloss

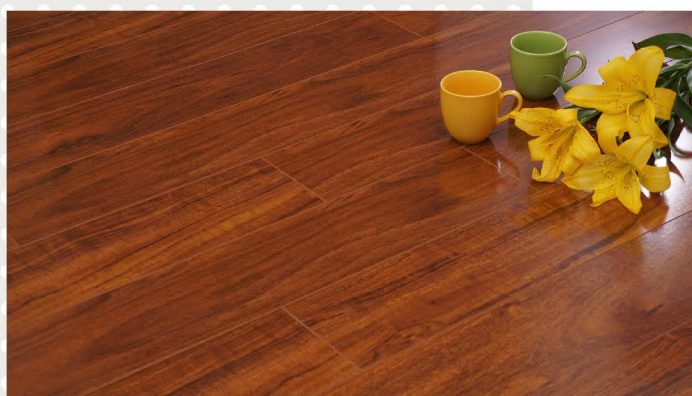

Canadian Maple High Gloss




American Walnut High Gloss



Color & finish Options !

Heritage Series

AC4 | 8mm | HDF 880

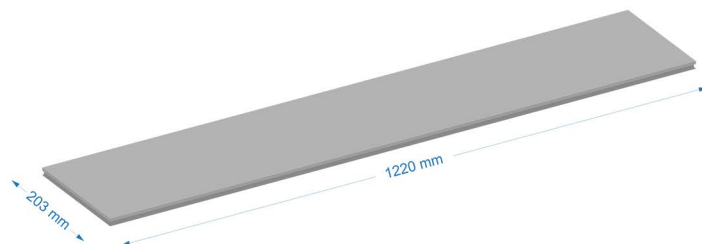

Plank Size :: 1220 mm x 203 mm


Packing :: 10 Planks | 26.66 SQF Per Box

Surface :: Embossed in Register (EIR)


Edge :: U Groove



Heritage Oak Natural

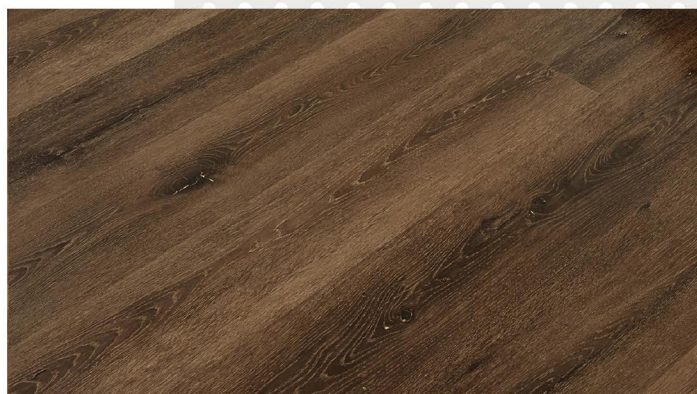

Heritage Oak Coffee

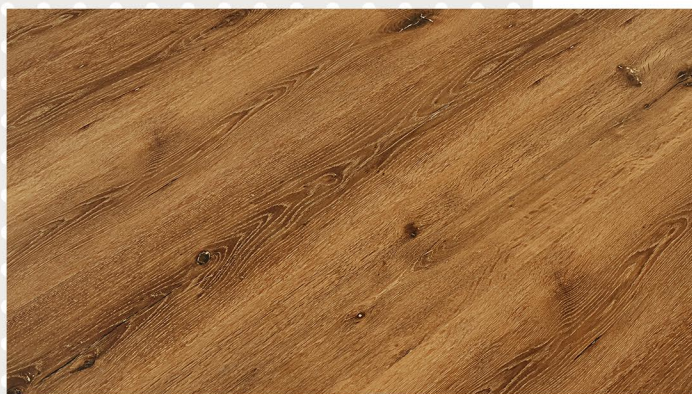

Heritage Oak Brown



Heritage Oak Grey




Heritage Oak Charcoal



Color & finish Options !

Elegant Series

AC4 | 8mm | HDF 880

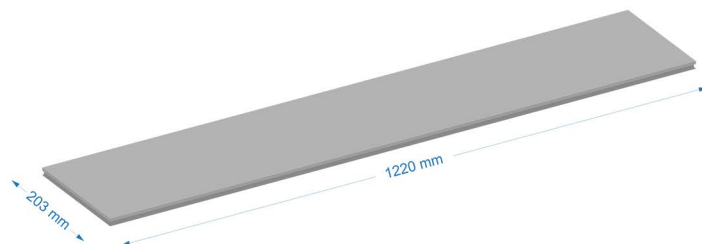


Plank Size :: 1220 mm x 203 mm


Packing :: 10 Planks | 26.66 SQF Per Box

Surface :: Small Embossed


Edge :: Straight

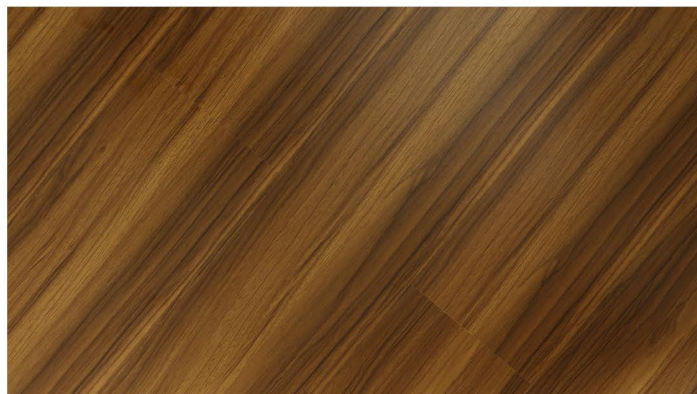


Elegant Teak

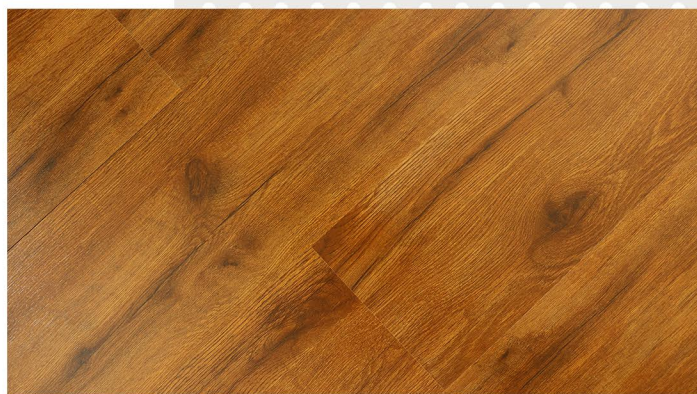


Elegant Caramel

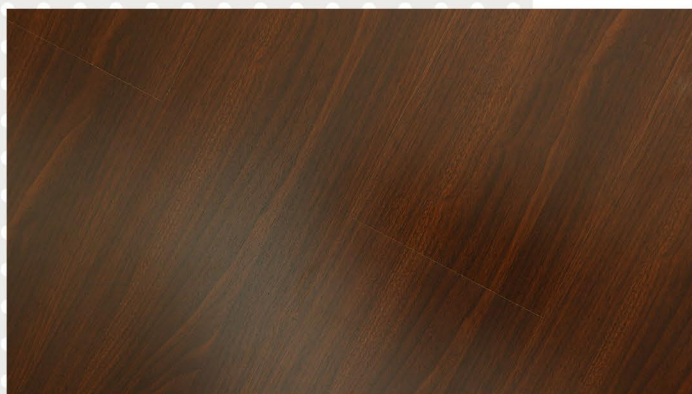

Elegant Walnut

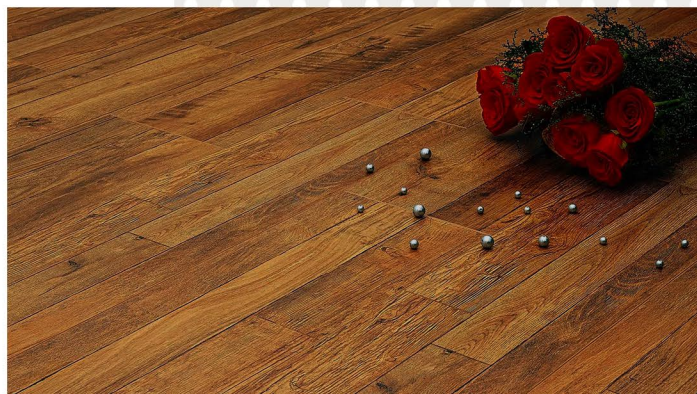

Elegant 2 Strip

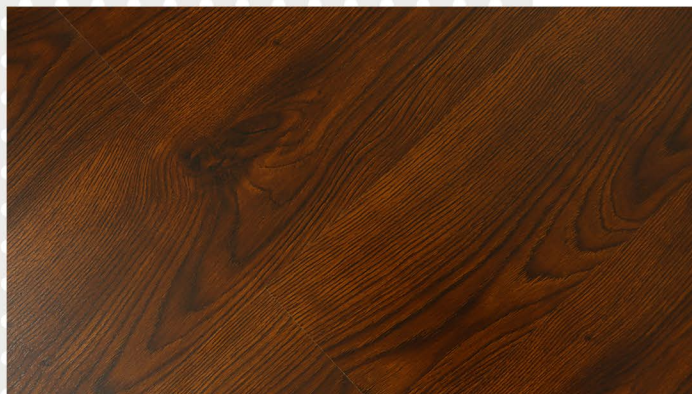

Elegant Mahogany

floor Accessories

Complete range of finishing accessories that come in matching colors with our floors which add a decorative touch and give the floors a professionally finished look.



Reducer profiles are commonly used along the doors where two different floors meet each other. These are also used for transition between two floors that are not level with each other.

T-Profile is a transitional profile that connects two floors which are at the same level. These are essential where the maximum run length of the floor exceeds 10m, and along doors where two different floors meet each other.



Quarter Round Beedings are used to blend the flooring with Cabinets or Glass partitions and to cover the Expansion gap and give the floor a refined look along such fixtures.

Skirtings add a decorative touch and give the floor a professionally finished look. These are used around the edges of the floor, along the walls to cover the expansion gap and to nicely blend the flooring with walls.



Installation Instructions

Suitable Floors

Level Solid Floors, Well Cured concrete, Marble and Ceramic Subfloors. All surfaces must be Clean, Even, Dry and Dust free

Unsuitable Floors


Rough, uneven, textured or unlevelled surfaces or subfloors. Such surfaces may result in improper installation and cause damage to the floor planks & shall void warranty. Do not install this product in areas which are damp or prone to moisture and termites, exposed to long term sunlight. **#For Indoor application Only.**

Installer / Owner Responsibility

It is the responsibility of the Installer & the owner to ensure that job site environment & sub-floor conditions meet all requirements as mentioned in these installation instructions. Manufacturer declines any or all responsibility for product performance or installation issues due to sub-floor deficiencies or jobsite conditions. **Note :** All work involving plumbing, masonry, painting, plastering, etc must be completed prior to flooring installation. Measures should be taken to protect floors from other trade works to avoid surface abrasion & scratches.

Preparation

Carefully check that all cartons have the same Model and Batch Number and that you have purchased sufficient material to complete the job. Manufacturer reserves the right to discontinue any model without prior notice and additional material might not be available in some cases. Open each carton and carefully check all planks prior to installation. Any plank that has been installed will be deemed acceptable to the installer. New concrete floors need to dry out for at least 15 days prior to installation. Scrape, plane or fill uneven holes or cracks using floor-leveling compound to skim coat grout lines. Remove any traces of dirt, grime or residue from the surface and ensure that the surface is smooth, clean, dry and level. The maximum run length is 9.14m (30ft.). For areas beyond 9.14m(30 ft), the floor will require transition strips. **Note : This product requires an underlay preferably an IXPE or EVA sheet with 2mm thickness.** Place the underlay from edge to edge, making sure that it covers the entire area of application prior to installation. **# Do not install this product without an underlay.**

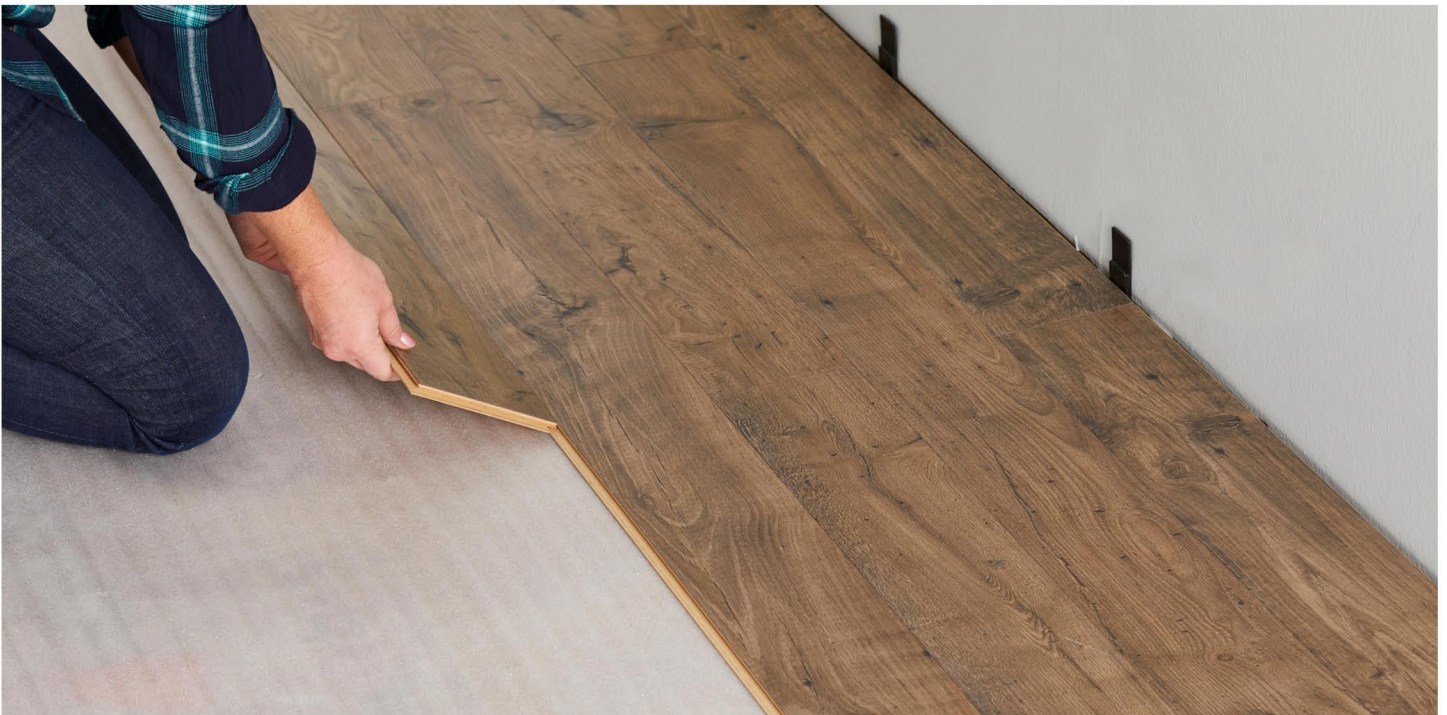

**DO NOT INSTALL THIS PRODUCT IN AREAS THAT ARE
DAMP OR PRONE TO MOISTURE & TERMITES**

WARRANTY VOID INCASE OF WATER & TERMITE DAMAGE

Diagram 1 : Remove the tongues (on the long side) for the first row of planks on the long side. This will ensure that the decorative surface of the flooring is under the skirting when installed. Start in a corner by placing the first plank with the trimmed side facing the wall. Use spacers along each wall to maintain an expansion gap of 8mm between the wall and the flooring. **Note: This product needs space for expansion and contraction and thus this spacing must also be maintained between the floor and all vertical surfaces, including cabinets, posts, partitions, door jams and door tracks.** You will also need to use transition strips in doorways and between rooms. Failure to do so may cause buckling or gaping.

Diagram 2 : To attach your second plank, lower and lock the end tongue of the second plank into the end groove of the first plank. Line up edges carefully to ensure a close and tight fit. Using a rubber mallet, lightly tap the top of the end joints where the first and second planks lock together. The planks should lay flat to the floor. Repeat this procedure for each subsequent plank in the first row. Continue the first row until you reach the last full plank.

Diagram 3 : To install the last plank of the first row, fit the last plank by rotating the plank 180° with the pattern side upward and placing it beside the first row of planks with its end up against the far wall. Line a ruler up across the end of the last full plank and across the new plank. Draw a line across the new plank with a pencil, and cut off the plank using a saw. Now rotate the cut plank 180°, so that it is back to its original orientation. Lower and lock its end tongue into the end groove of the last full plank. Lightly tap the top of the end joints with a rubber mallet until the planks are flat on the floor. You will begin the next row with the cut off piece from the first row to stagger the pattern. Pieces should be a minimum of 200mm (8 in) long and joint offset should be at least 400mm (16 in). Cut pieces should be no less than 152.4mm (6 in) in length and 76.2mm (3 in) in width. Adjust for a balanced look.


Diagram 4 : To start your second row, rotate the cut off piece from the previous row 180° so that it is back to its original orientation. Tilt and push its side tongue into the side groove of the very first plank. When lowered, the plank will click into place. Using a tapping block and rubber mallet, lightly tap the long side of the new plank to lock it with the planks of the first row. The planks should lay flat to the floor.

Diagram 5 : Attach the second plank of the new row first on the long side. Tilt and push into place, making sure edges are lined up. Lower plank to the floor. using a tapping block & rubber mallet, lightly tap the long side of the new plank to lock it into place. Next, lightly tap down on top of the end joints with a rubber mallet to lock them together. Continue laying remaining planks in this manner.

Diagram 6 : To fit the plank of the last row, lay a plank on top of the previous row with the tongue to the wall. Lay a ruler across the plank so that it is lined up with the side of the planks of the previous row and draw a line across the new plank with a pencil. Don't forget to allow room for spacers. Cut the plank with the hand saw and attach into position as done before.

Diagram 7 : Door frames and heating vents also require expansion room. First cut the plank to the correct length. Then Place the cut plank next to its actual position and use a ruler to measure the areas to be cut out and mark them. Cut out the marked points allowing the necessary expansion distance on each side.

Diagram 8 : You can trim for door frames by turning a plank upside down and using a handsaw to cut away the necessary height so that planks slide easily under the frames. Remove the spacers once the floor is completely installed.

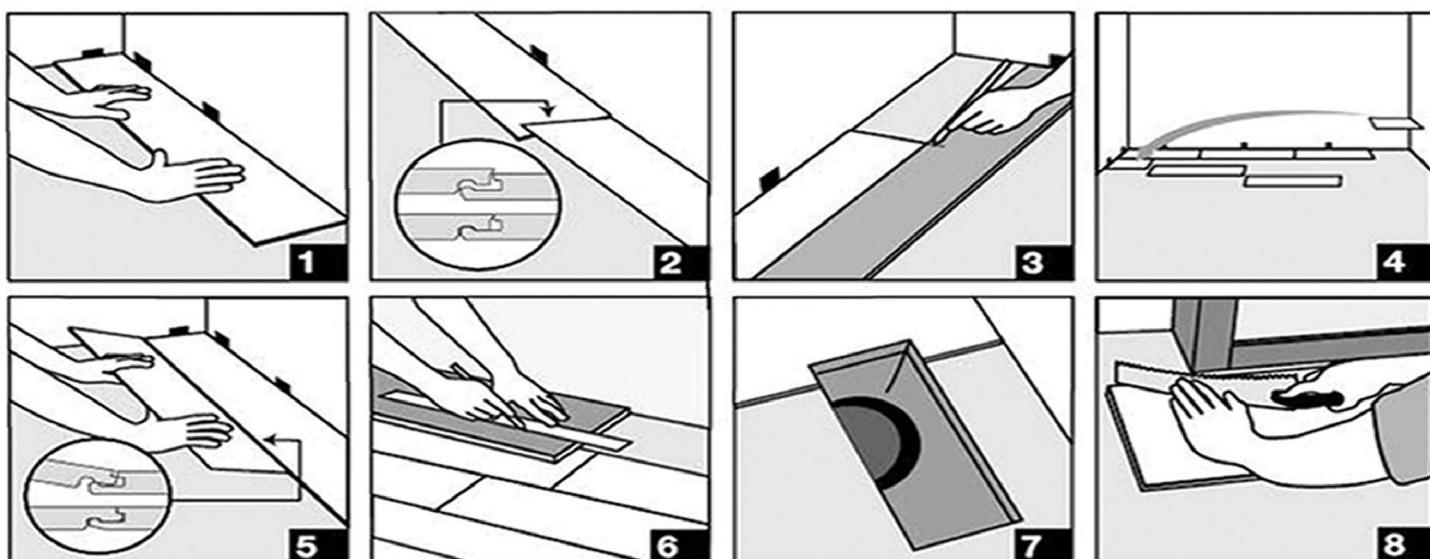

Care & Maintenance



Laminate floors may look like wood, But you can't just treat them like seasoned wood. Cleaning laminate floors requires a focused approach and less water than you might think !

- For General everyday cleaning, use a soft-bristle broom to sweep and collect dust.
- Occasionally clean the floor using a dampened micro fibre cloth/mop, once or twice a month. Do not soak the floor with water. Though laminate floors are water resistant, if they are soaked in water, they can be damaged.
- For deep cleaning, the best way is to use products made especially for them such a laminate floor cleaner. If you don't have them, a teaspoon of baby shampoo in 10 Litre of water will also work. Use the solution to clean the floor and immediately dry it using a micro fibre cloth/mop. Be careful not to soak the floor. Deep cleaning should only be done once or twice a year.
- Avoid oil-based cleaners and products designed for wood products and furniture. They can leave streaks that are impossible to remove. Never wax or polish your laminate flooring.
- Wipe all spills immediately and never allow any liquid to sit on the surface for longer periods. Blot spills with a microfiber cloth or tissue as soon as they happen.
- If wax or gum falls on your floor, freeze it with an ice pack. Then, carefully scrape up the frozen wax or gum with a plastic scraper or plastic knife. Wipe the area with a lightly dampened microfiber cloth to pick up any residue.
- Oily spots or colour stains, like marker, lipstick or ink, can be treated with mild acetone or nail polish remover. Place a small amount of the liquid on a clean cloth and wipe up the stain. Follow with a lightly dampened microfiber cloth to pick up anything that's left. Be sure the area is dry to the touch when you finish.
- Never use a floor buffer or polisher while cleaning laminate flooring
- Don't use abrasive or acidic cleaners. Harsh cleaners might strip the protective coating from the floor.
- Don't use steel wool or scouring powder. Both can leave scratches on your floor.
- Never try to slide anything heavy across the floor. Use protective pads under all furniture.
- Place entry mats at doorways to keep dirt and grime from being tracked onto the floor.
- To prevent scratches, keep your pet's nails trimmed.

about US

LEBEN™ is a formidable array of decorative building materials. We at Leben consistently strive to bring the latest products & solutions in Flooring, Wall Coverings & Ceiling products from across the globe to your very door step. Our Products are manufactured globally to the highest European and American standards, built and tested to last a Lifetime.

Established in the year 2015, we have grown exponentially from offering a single solution to more than nine different types of Decorative building materials in a meagre span of six years. We have carried out sales of more than 50 Million Square feet of Flooring, Wall Panels and ceilings since inception with a warranty claim of less than 0.01% which itself speaks for our quality. Our inventory is ever increasing with over 300 models in stock for the offering.

Head quartered in New Delhi, Our network is rapidly expanding with hundreds of Retailers across India joining hands with ours to offer true luxury thats durable and affordable.



Our Clients !



other
Products !
we offer



SPC Flooring



WPC Louver Panels



3D Wall Panels



Outdoor Decking



PVC Wall Panels



Exterior Louvers



WPC Timber Tubes



WPC Baffle Ceiling

Leben India Private Limited

646/2, Silver Oak Farms, Ghittorni, New Delhi, India -110030

www.leben.co.in